


Installation Instructions

.....

RC8M Mini Rubber Clamp

- 1.** Use either #10 screw or bolt and washer (Do Not Over tighten); or use 4 sheet metal screws and washers through the holes on the four corners of the pad.
- 2.** Clamp can be mounted with the strap facing in any direction.
- 3.** To Clamp: Put the tool or implement into the jaws and push the strap to the desired location.
- 4.** Clamps can be used as pipe stand-offs, but do not use on pipes whose temperature consistently exceeds 180 degrees F (or 82 degrees C) applications. Do not use on exhaust pipes.

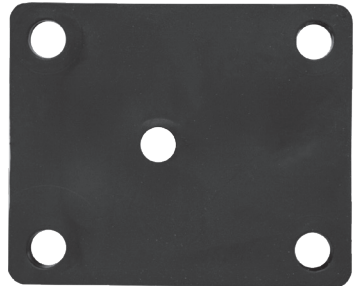

Mounting Holes on Base

Warranty

Buyers Products Co. warrants all truck/trailer hardware manufactured or distributed by it, to be free from defects in material and workmanship for a period of one year from date of shipment. Parts must be properly installed and used under normal conditions. Any product which has been altered, including modification, misuse, accident or lack of maintenance will not be considered under warranty. Normal wear is excluded. The sole responsibility of Buyers Products Co. under this warranty is limited to repairing or replacing any part or parts which are returned, prepaid, and are found to be defective by Buyers Products Co. Authorization from Buyers Products Co. must be obtained before returning any part. No charges for transportation or labor performed on Buyers' products will be allowed under this warranty.